



FITTING INSTRUCTIONS

LINK VENT - 2500 EA

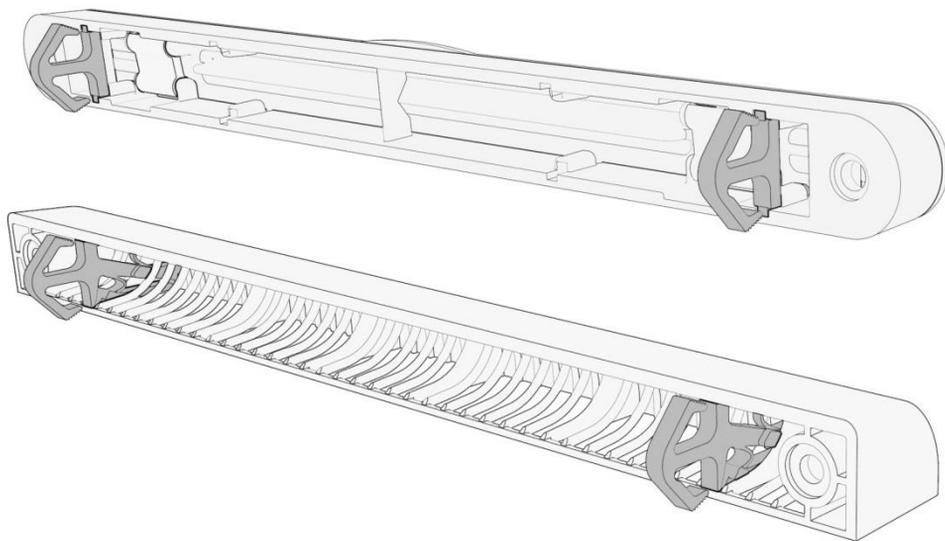

PACKAGE CONTENT

All items are pre assembled

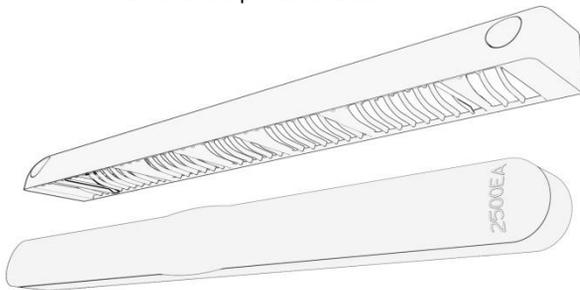

X1 EXTERNAL
CANOPY

X1 INTERNAL
VENTILATOR



X2



X2



X2



FITTING INSTRUCTIONS

CAUTION - Once fitted vents may be damaged in an attempt to remove them.

VENTILATOR (inside of the window) should be orientated so you can best see the clip positions ②. The Link vent can is fixed to the window using clips, if you wish to use screws we recommend 4.5-3.9 Self-drilling screw suitable for use with PVC with a head diameter less than 7mm, the clips will act as a guide to locate the screw fixing position.

CANOPY (outside of the window) If you want to fit using the screw holes. Gently take a small screwdriver and push the screw cap covers out from the back using the screw hole) (A)

The Ventilator is normally fitted in the head of the window frame in a section that does not contain a reinforcing member. ① Rout a 13mm height slot 204mm wide through the frame section. Position the ventilator ② and Canopy ③ in the centre of the rout and push the ventilator and canopy firmly in to place.

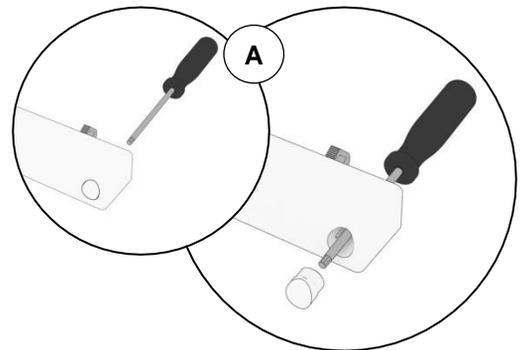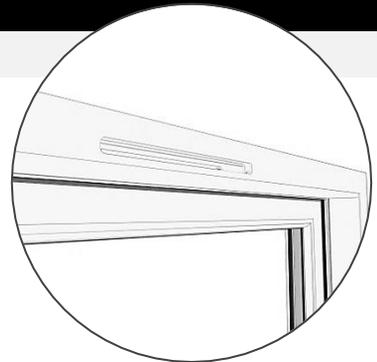



①

②



Continue...



3

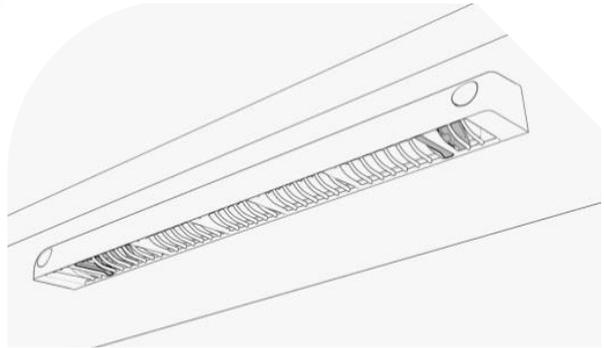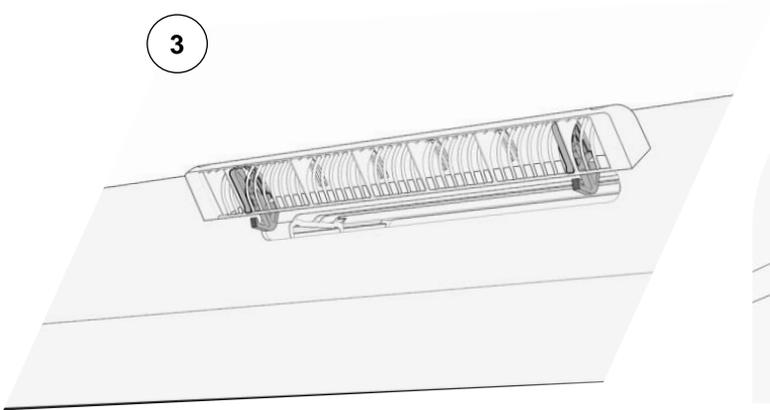




VENTILATOR (Inside the window) open the closure plates to see the screw holes at each end. (B)

A screw can be used to stop any lateral movement on both sides of the vent this can be affixed through either of the screw ports. If using the screw positions fix these in place being careful not to over tighten the screws. (C)

CANOPY- Replace the cap covers gently making sure they are oriented correctly with the canopy profile. (4)

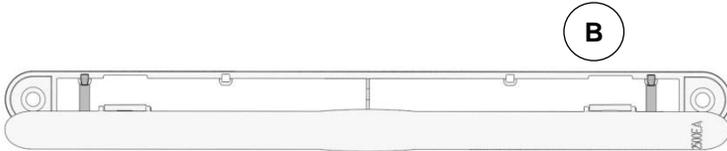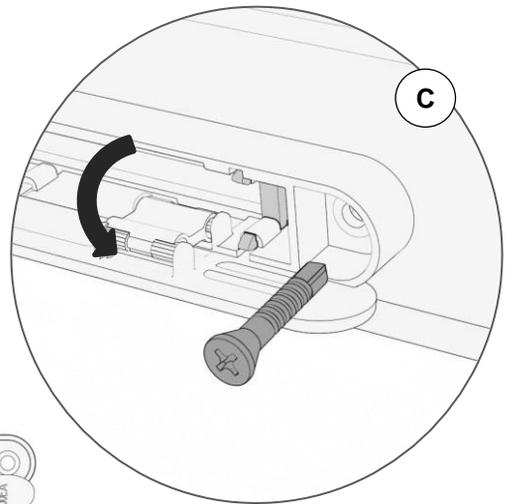

4

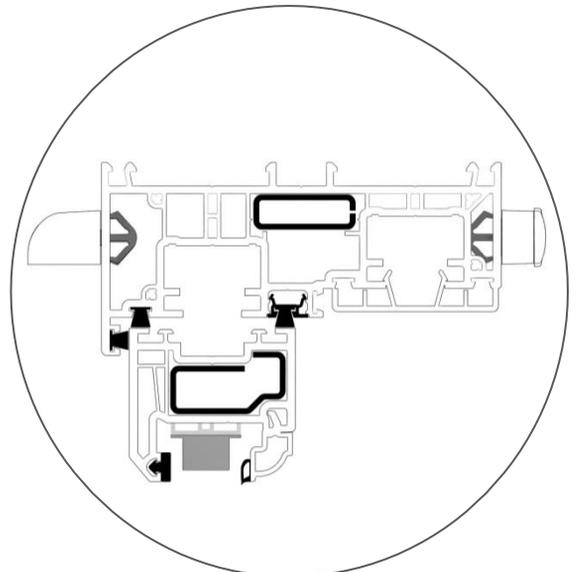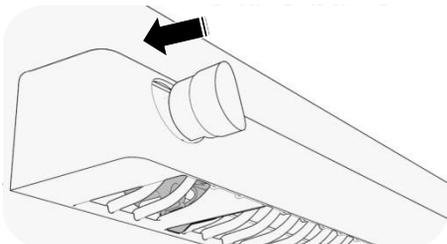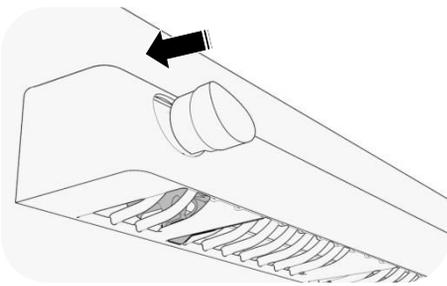

Cap must be Oriented correctly before being pushed in

Link Vent Side Profile in fixed position