

 


## Modular Vent

### Operation & Maintenance Manual




**2000 Modular Vent**



**2000 Modular Vent**



**4000 Modular Vent**

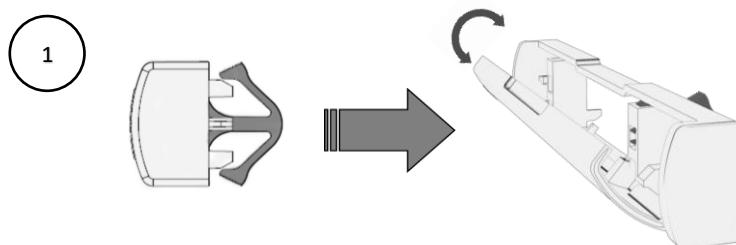

*Figure1. Modular Vent Internal Lid*

#### Operation:

- Open and close the internal ventilator by adjusting the lid to regulate the incoming airflow. *figure1. 4000 version has two adjustable lids & 6000 version 3, etc, which operates independently to each other.*

#### Maintenance:

- Every 3 months gently brush the external canopy and internal vent with a hand brush to remove any cobwebs and wipe down with soapy water using a damp cloth.
- Do not use abrasive cleaning products or abrasive cleaning materials.
- Where possible, gently open the internal vent and vacuum the cut-out rout clearing out any dust and debris for efficient performance.

