 




## Slimline Vent 2000 & 4000


### Operation & Maintenance Manual



**2000 Slimline Vent**



**4000 Slimline Vent**

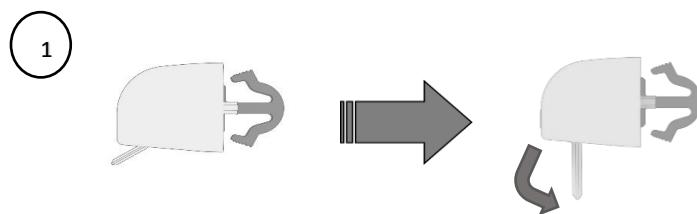

*Figure1. Slimline Vent internal open and closed position*

#### Operation:

- Open and close the internal ventilator by adjusting the closure lid to regulate the incoming airflow. *figure1*, 4000 version has two adjustable closures which operates independently to each other.

#### Maintenance:

- Every 3 months gently brush the external canopy and internal vent with a hand brush to remove any cobwebs and wipe down with soapy water using a damp cloth.
- Do not use abrasive cleaning products or abrasive cleaning materials.
- Where possible, gently open the internal vent and vacuum the cut-out rout clearing out any dust and debris for efficient performance.



AFI-012

REV-02

Nov 2025

