



AluVent 2500, 4000 & 5000

Operation & Maintenance Manual



2500 AluVent



4000 AluVent



5000 AluVent

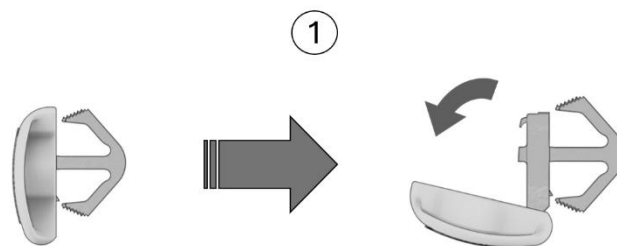


Figure 1. AluVent internal lid opening

Operation:

- Open and close the vent by tilting the lid on the internal vent.
- The Lid can be tilted to direct the air in the desired direction, as shown in Figure 1.

Maintenance:

- Every 3 months, gently brush the external canopy and internal vent with a hand brush to remove any cobwebs and wipe down with soapy water using a damp cloth.
- Do not use abrasive cleaning products or abrasive cleaning materials.
- Where possible, gently open the internal vent and vacuum the cut-out rout clearing out any dust and debris for efficient performance.

