



Fitting Instructions - AluVent 5000

PACKAGE CONTENT

All items are pre-assembled

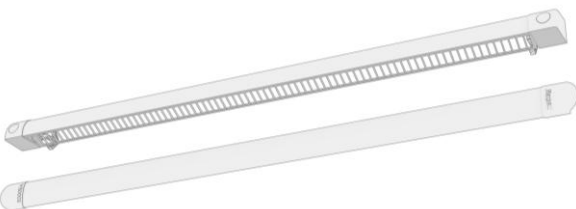

X1 EXTERNAL CANOPY
X1 INTERNAL VENTILATOR

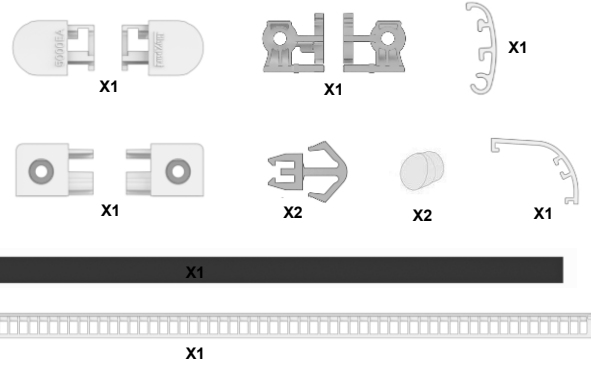


FITTING INSTRUCTIONS


CAUTION - Once fitted vents may be damaged in an attempt to remove them.

AluVent has been designed for installation on both PVC and Aluminium profiles. We recommend AluVent 5000 to be screw fixed for optimal performance.

1. The ventilator is typically fitted in the head of the frame or sash, in a section that does not contain a reinforcing member. A 13mm or 10mm slot should be routed, as detailed below. The 13mm configuration achieves an EQA of 5000, while the EQA of the 10mm configuration is TBC.

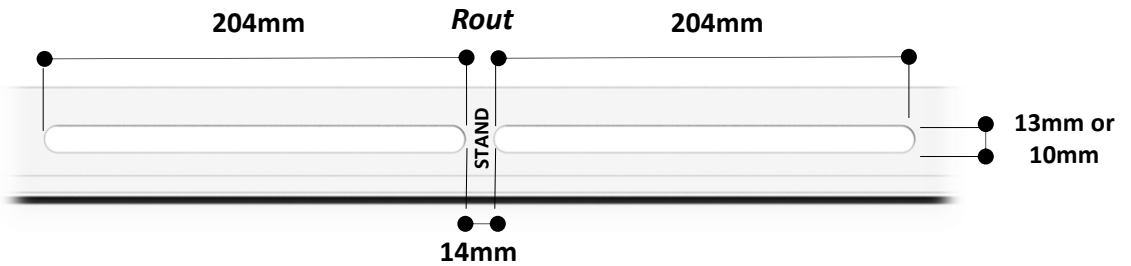

2. AluVent is supplied with loose Screw cap covers. If screw cap covers are accidentally fitted, gently take a small screwdriver and push the screw cap covers out from the back using the screw hole.

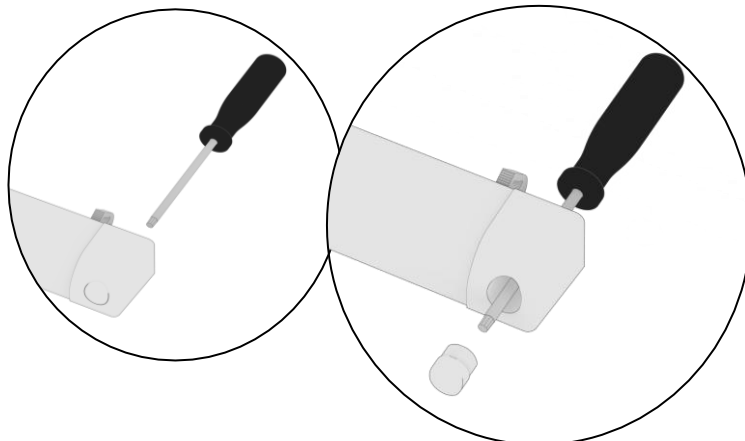


Continue

3. The internal ventilator fits on the inside of the window, while the canopy is installed on the outside. Align the clips with the routed cavity, then press both parts firmly into place, using the clips to guide correct positioning.



4. Using appropriate fixings and tools, ensure the AluVent is securely positioned before installation. Screw the external canopy into place through the screw holes located on the end caps. Then, open the internal lid of the ventilator and firmly secure the ventilator using the designated fixing points.

We recommend using stainless steel 4.5–3.9 self-drilling or self-tapping countersunk screws, or equivalent, suitable for use with both PVC and Aluminium. The screw head diameter should be less than 7mm. The clips will act as guides to assist in locating the correct screw fixing positions. Please note that for aluminium frames, a pilot hole is required before using self-tapping screws.

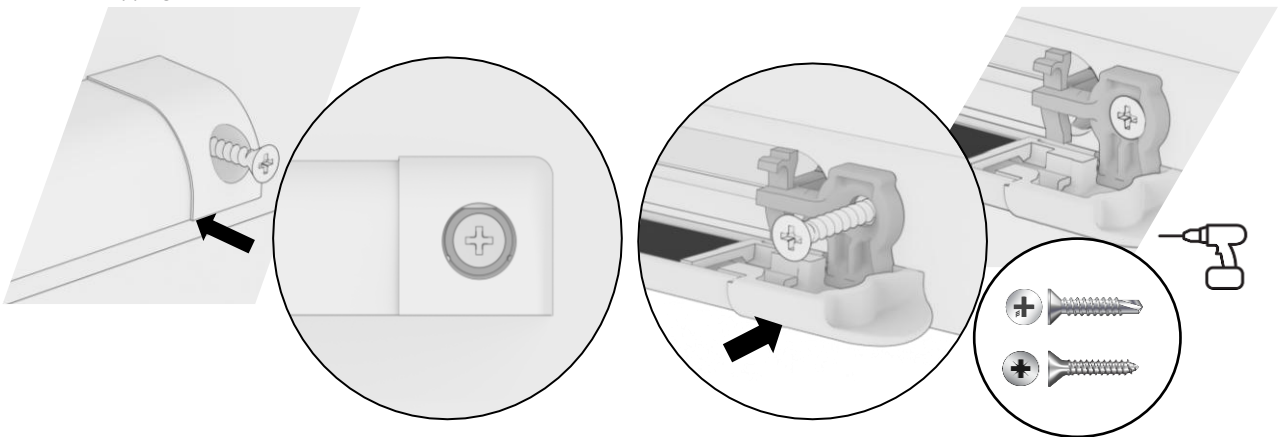

5. Place the screw cap covers into the canopy screw holes, ensuring they are correctly oriented before pressing them firmly into position.

