Link Vent 5000,4000 & 2500

Operation & Maintenance Manual

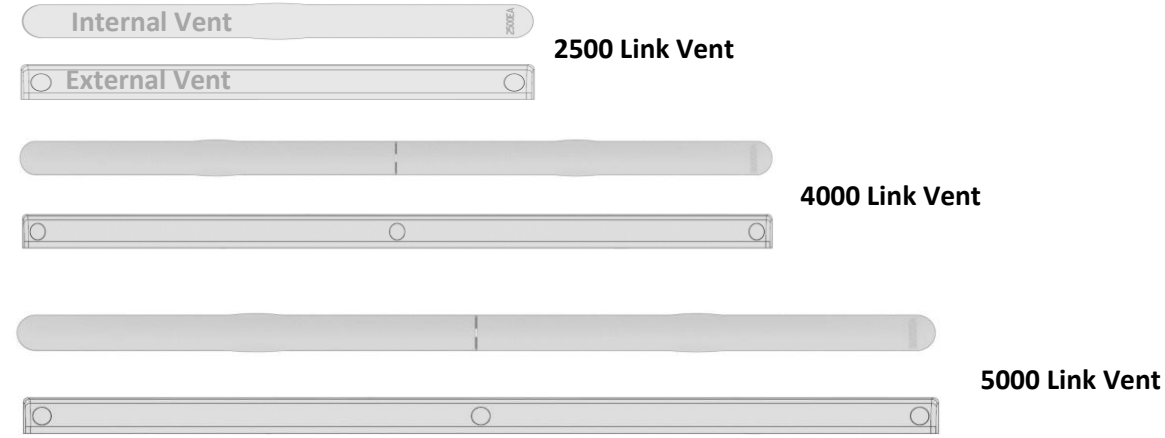

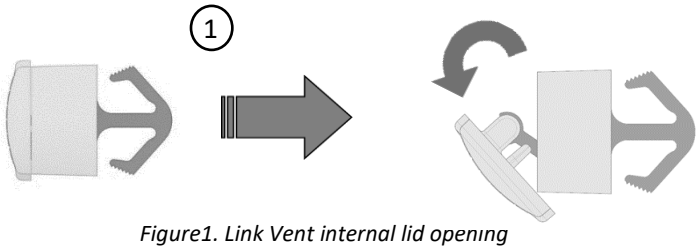

Figure1. Link Vent internal lid opening

Operation:

- Open and close the vent by tilting the lid on the internal vent, 4000 & 5000 version has two lids which operate independently to each other.
- The Lid can be tilted to direct the air in the desired direction as shown on *figure 1.*

Maintenance:

- Every 3 months gently brush the external canopy and internal vent with a hand brush to remove any cobwebs and wipe down with soapy water using a damp cloth.
- Do not use abrasive cleaning products or abrasive cleaning materials.
- Where possible, gently open the internal vent and vacuum the cut-out rout clearing out any dust and debris for efficient performance.