



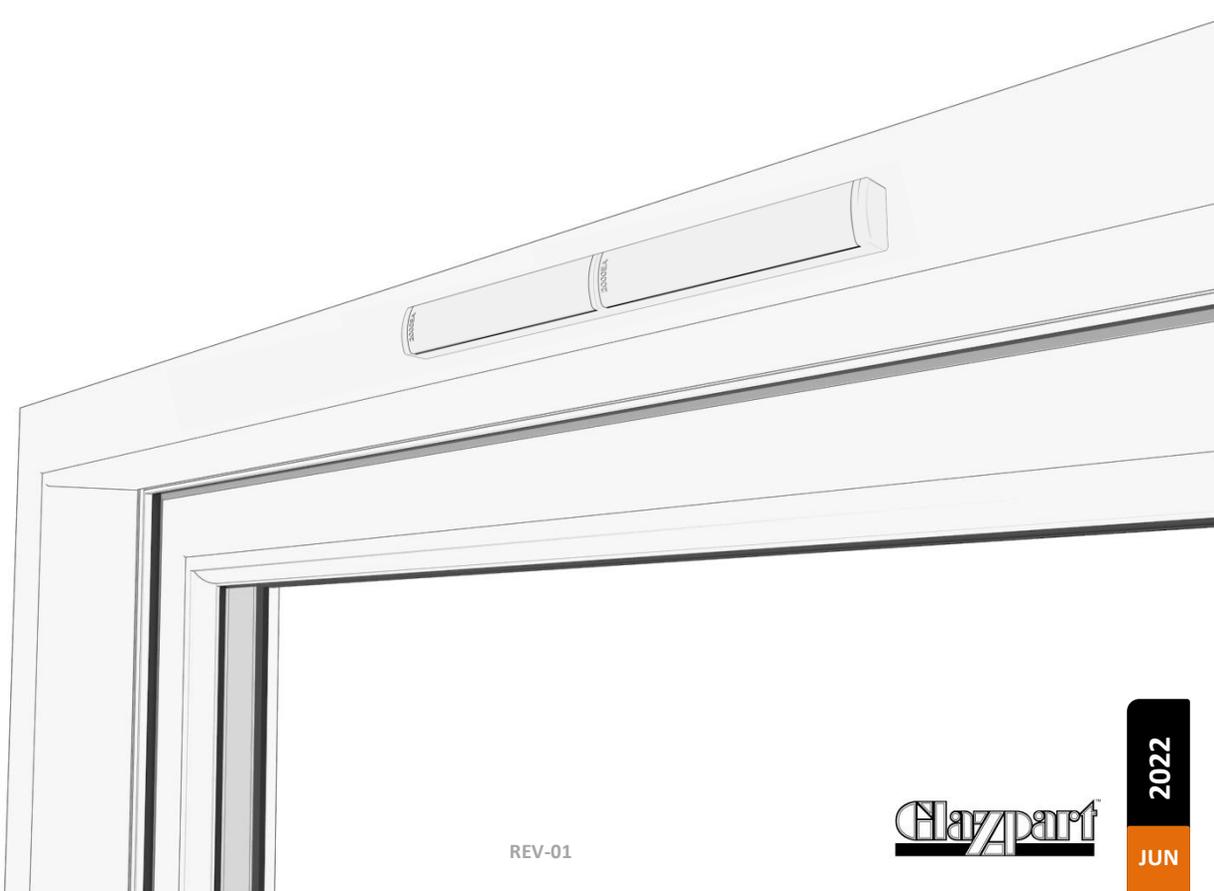


FITTING INSTRUCTIONS

MODULAR VENT – 2000 EA

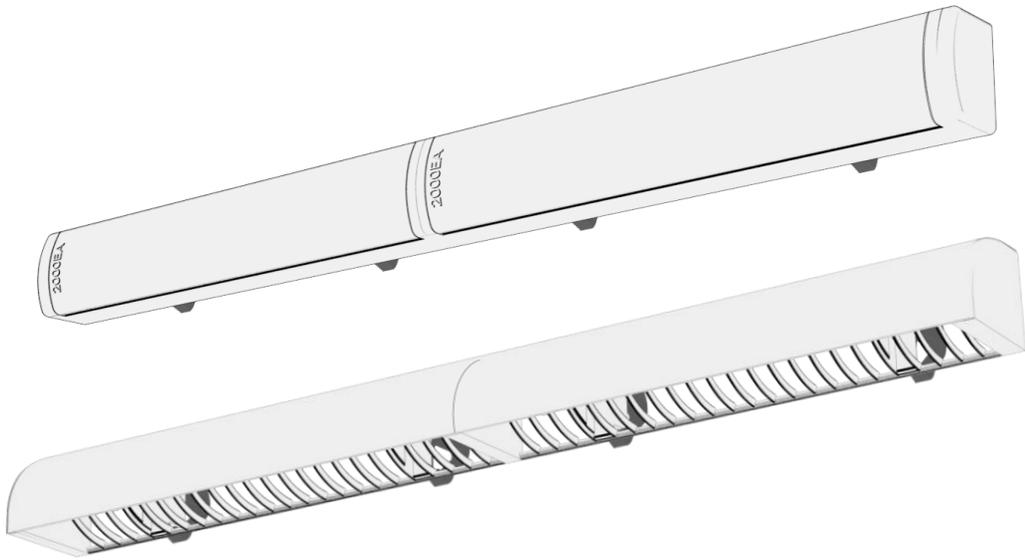

VENTILATOR COMPONENTS

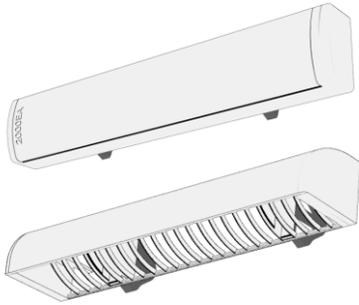

X1 INTERNAL VENTILATOR

X1 EXTERNAL CANOPY



X2

X2

EXTERNAL END CAPS




INTERNAL END CAPS


FITTING INSTRUCTIONS

CAUTION - Once fitted vents may be damaged in an attempt to remove them.


- 1 Rout 19mm X 132mm with 6.5mm Bridgings for every additional 2000 module. Recommended routing details as shown below

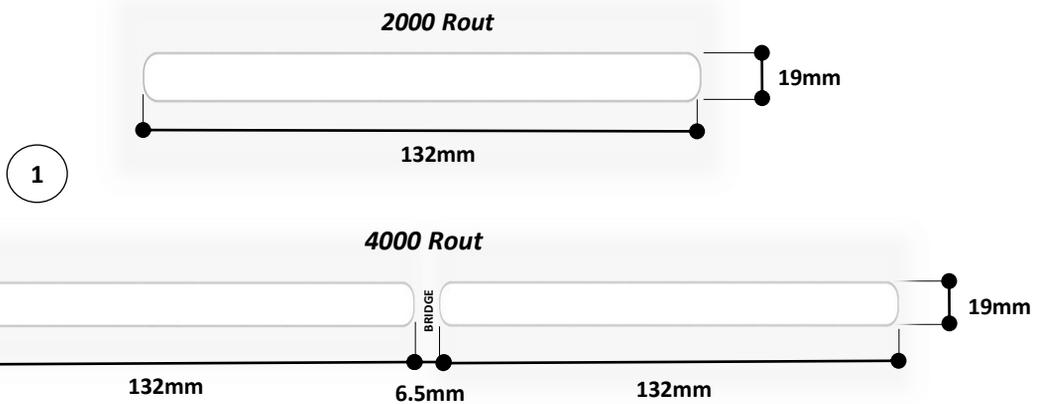

- 2 Stack up the external Canopy to the required specification by sliding the modules together thereafter slide the end caps to their appropriate ends

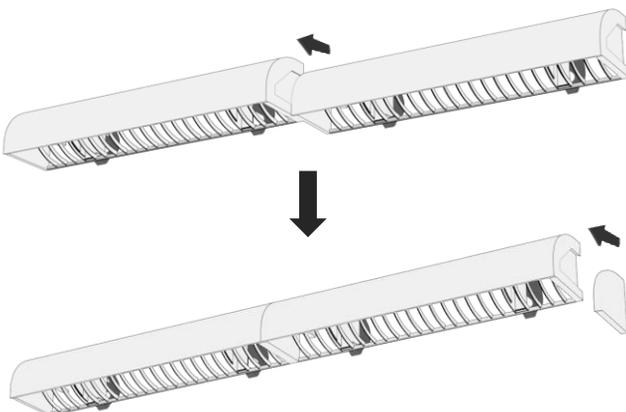

- 3 Stack up the internal vent to the required specification by sliding the modules together thereafter slide the end caps to their appropriate ends

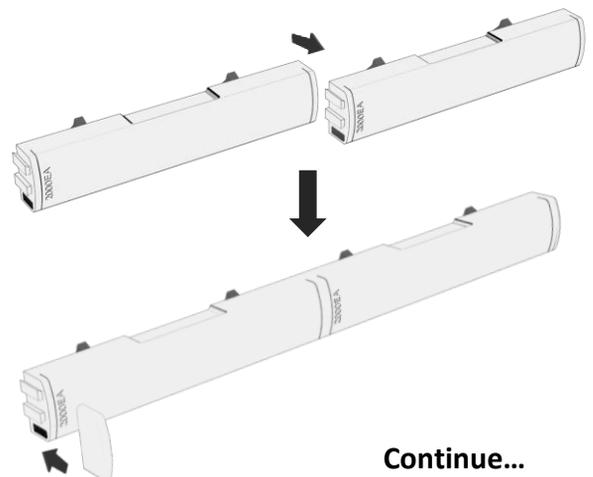


Continue...

Note: Modular Vent is fitted to the frame for illustrative purposes only, Modular vent can be fitted to the frame or the sash.

4

Position the external canopy and internal ventilator and firmly push it into place with the EQA marking on the left hand side

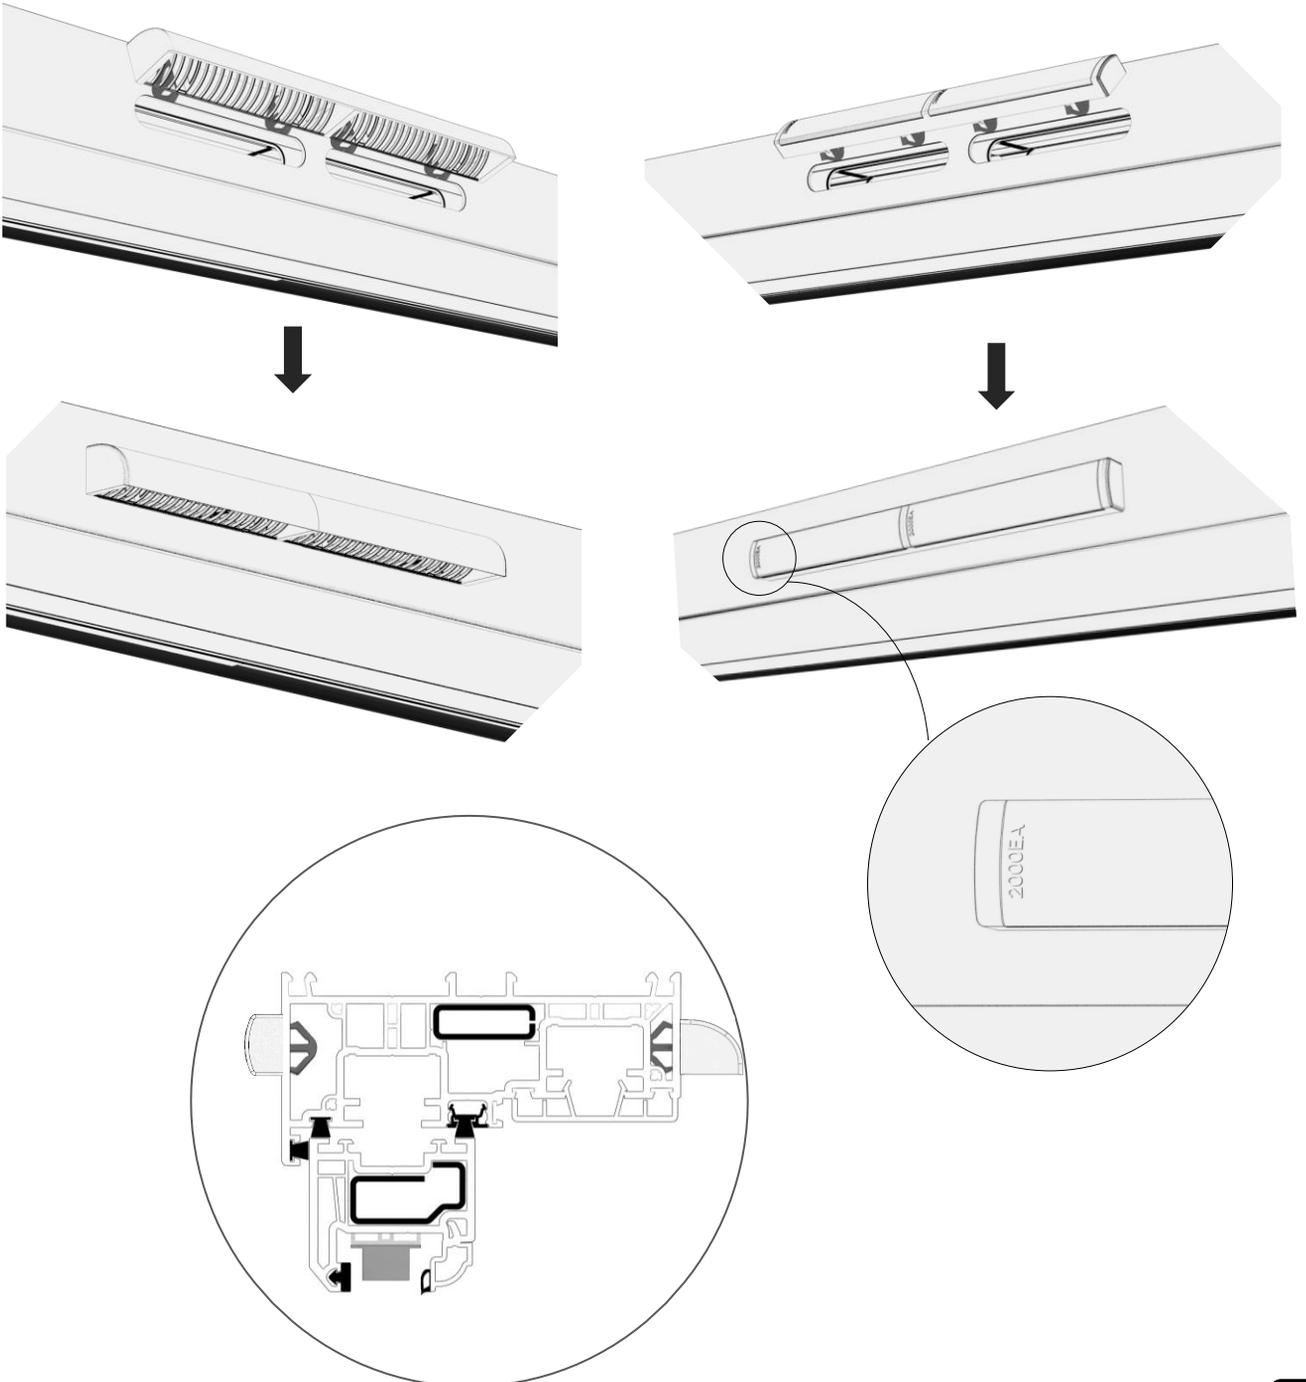

Modular vent internal & external canopy in fixed position